

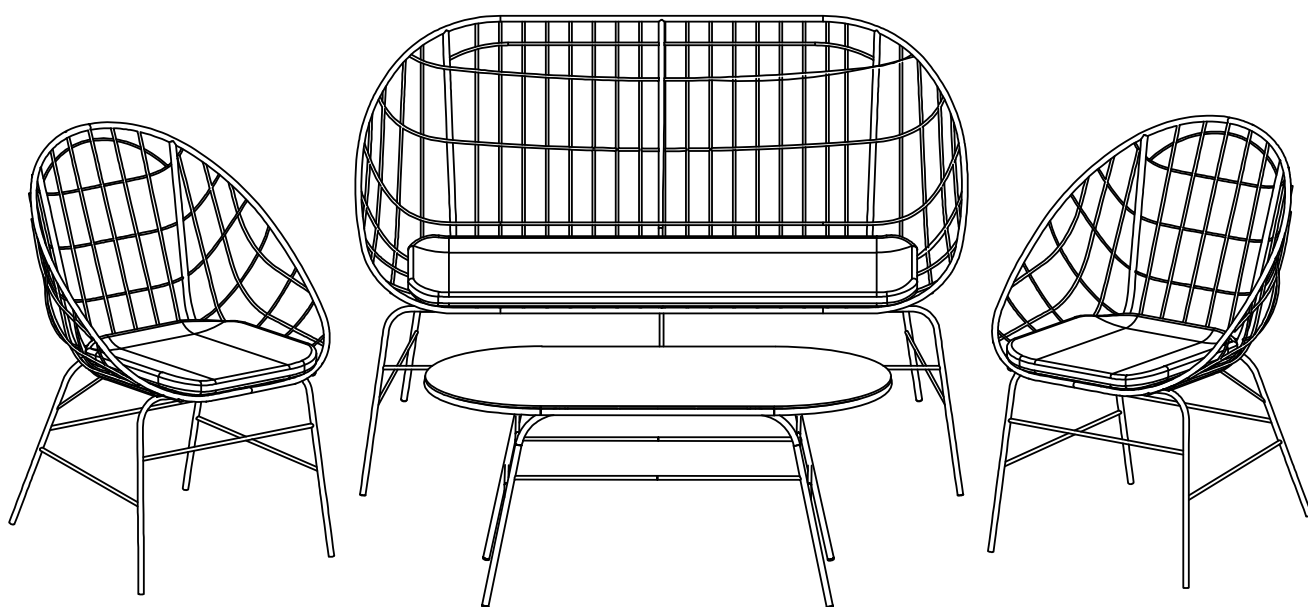


PLANTAGEN®

GRIMSTAD SOFA SET







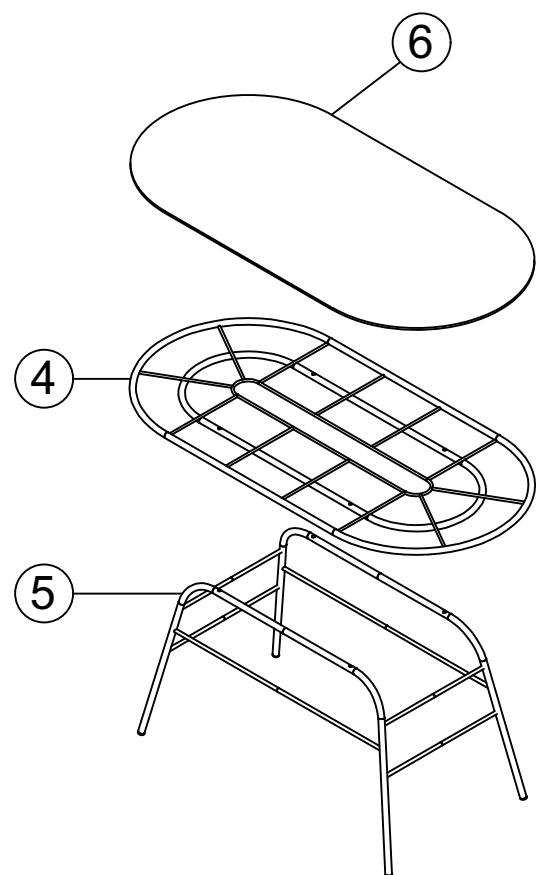


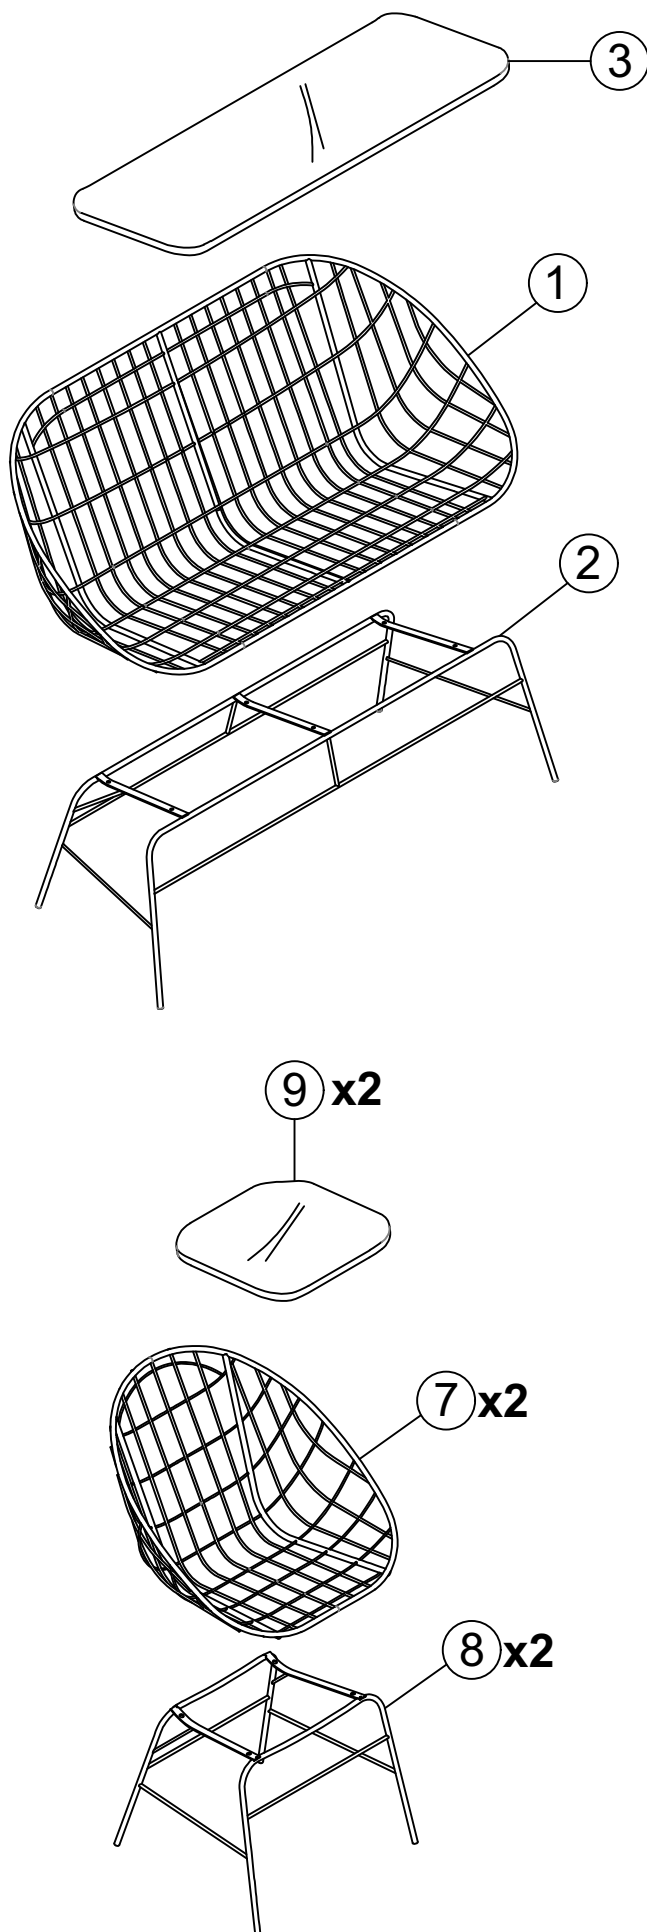

PARTS

Check that you've received
all parts listed below.

BOX: 1/2

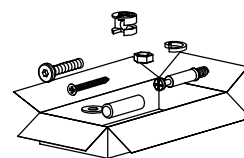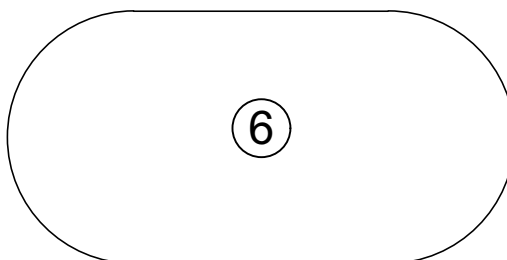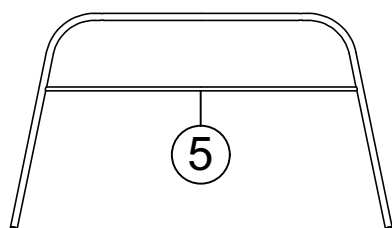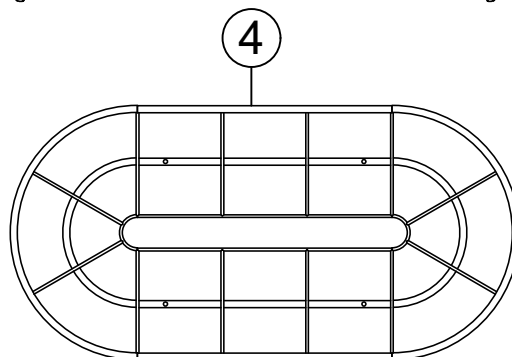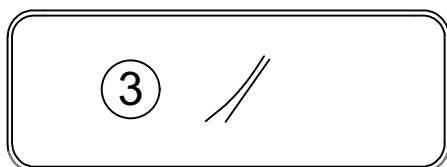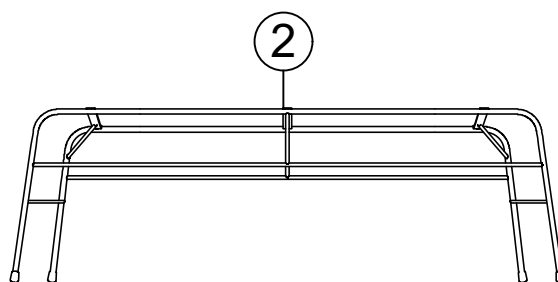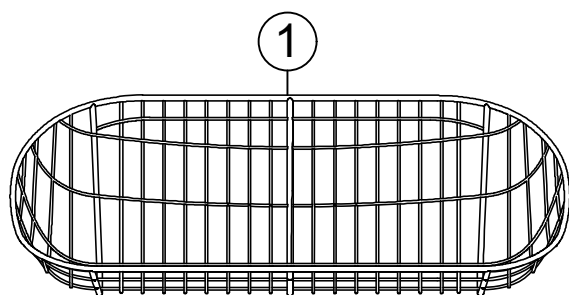


PARTS


Check that you've received
all parts listed below.

BOX: 2/2


7 x2

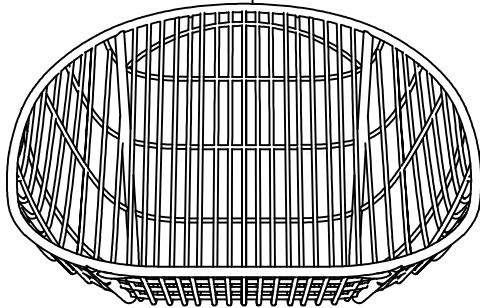

8 x2

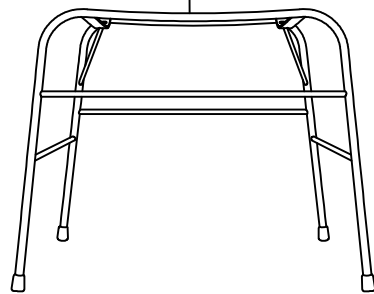


9 x2

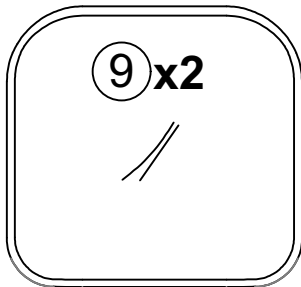


HARDWARE

Check that you've received
all hardware listed below.

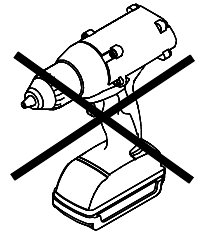


A x 10



M6x15mm

B x 14




Ø16x1 mm

C x 1





4 mm

D x 4


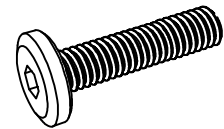


M6x25mm

STEP 1

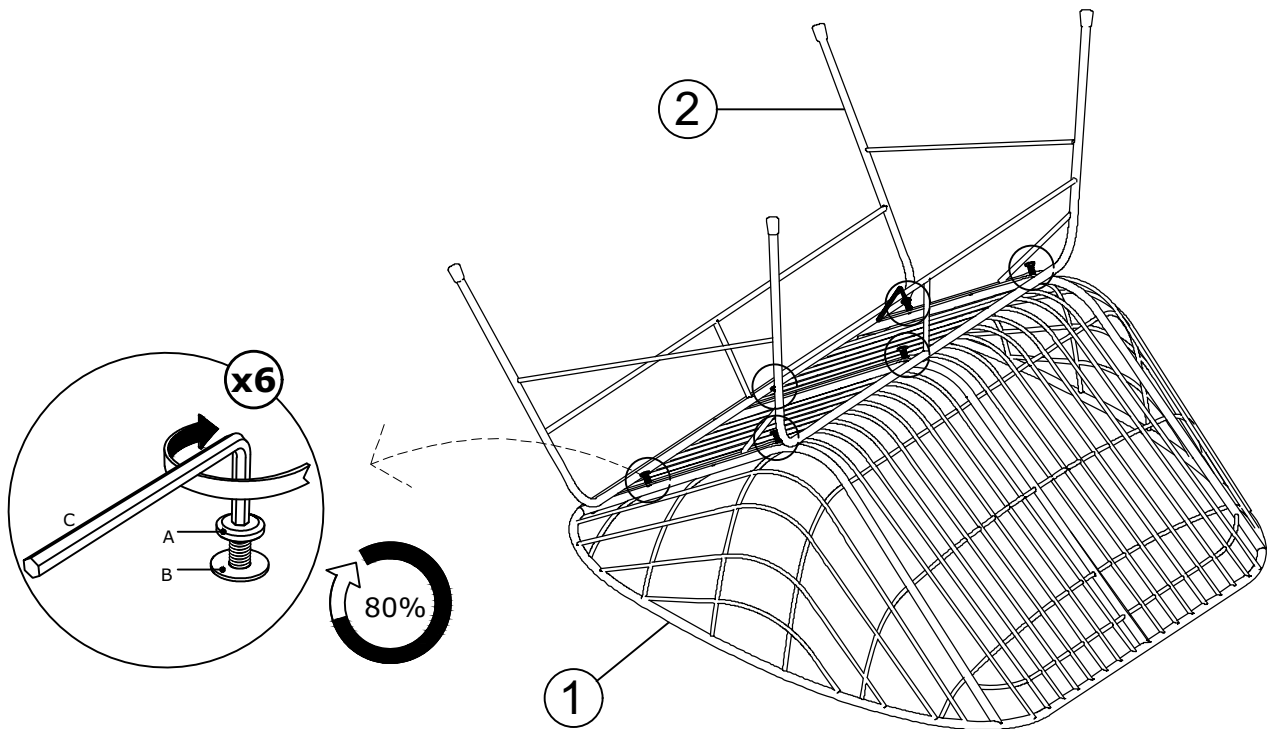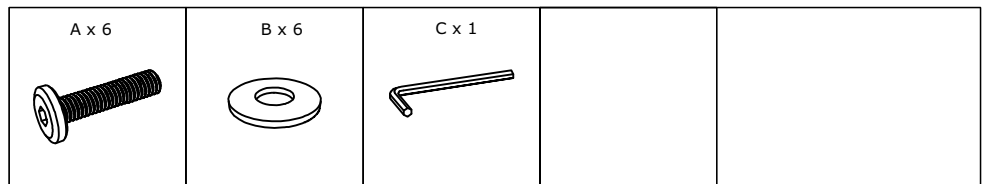




STEP 2

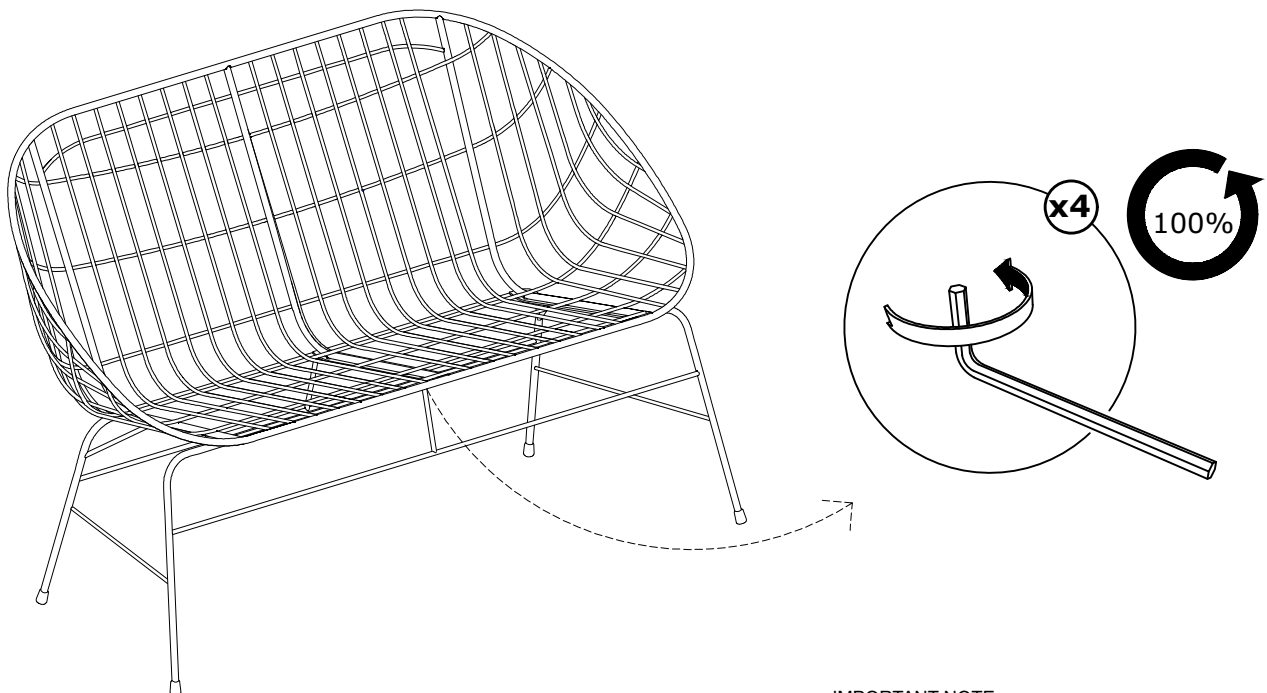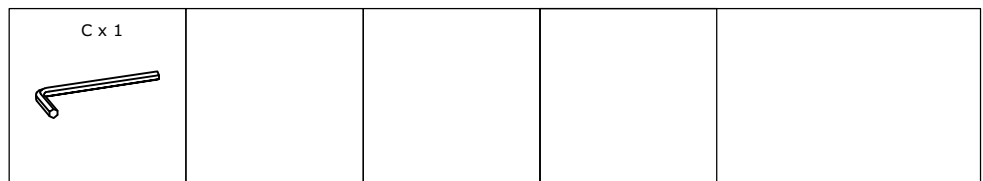

IMPORTANT NOTE:

Do not tighten all screws/bolts until all completely assembled.
Thank you.



STEP 3

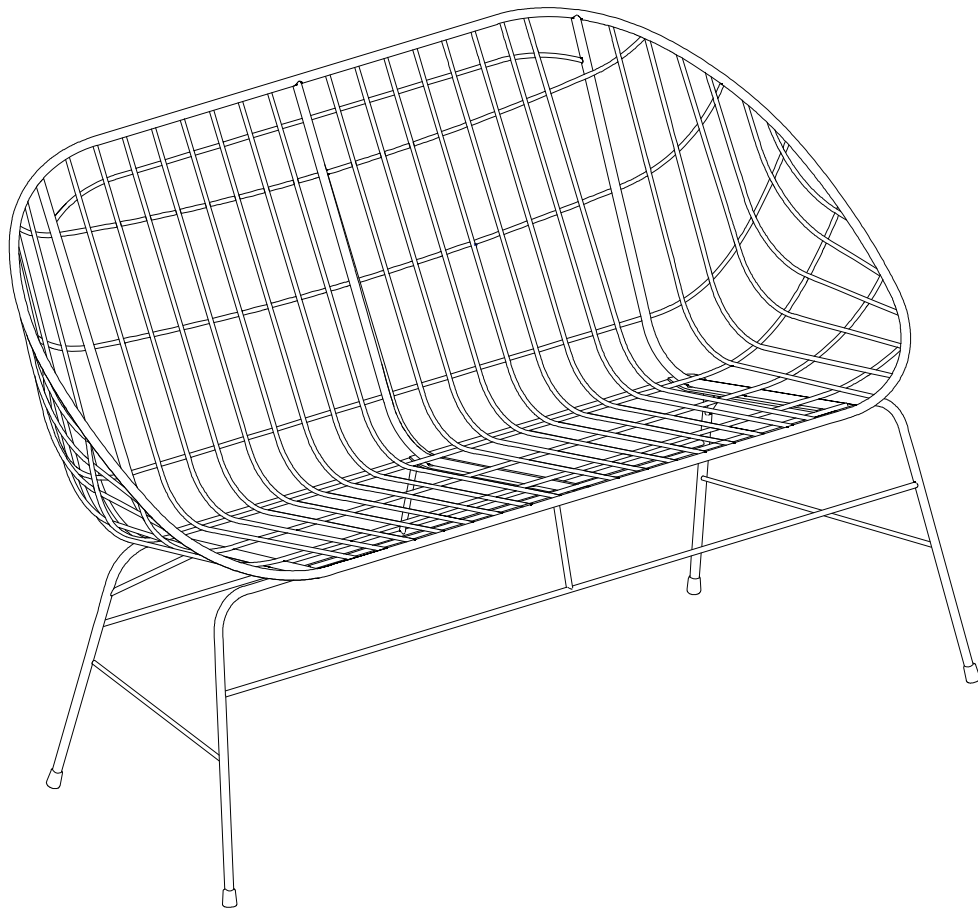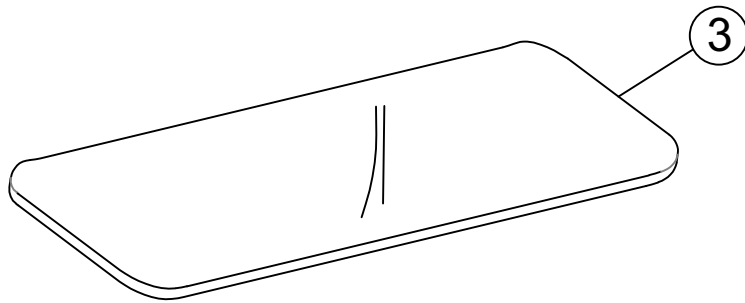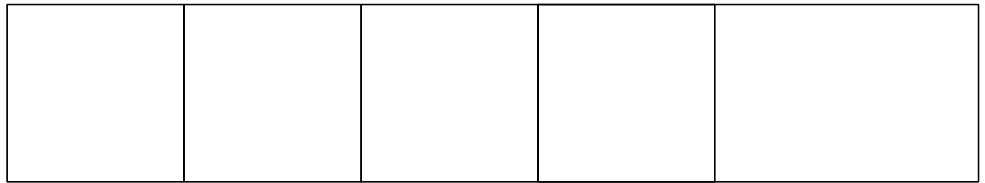



IMPORTANT NOTE:

Do not tighten all screws/bolts until all completely assembled.
Thank you.




STEP 4

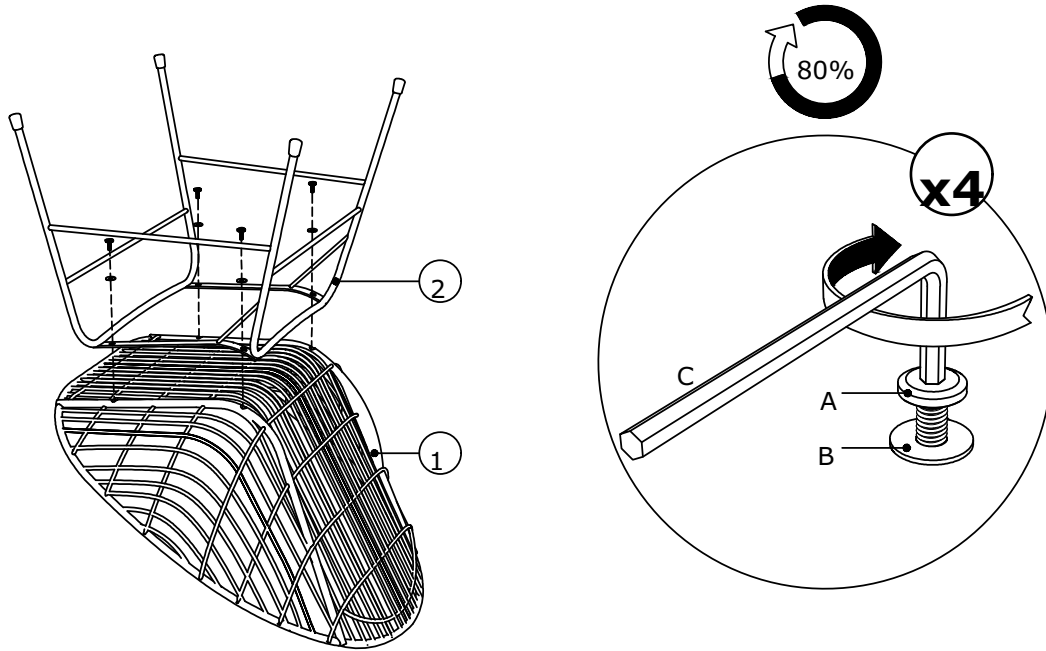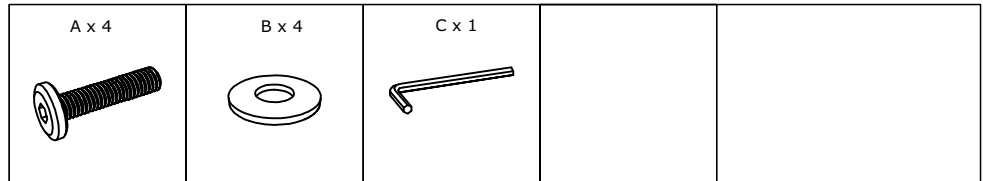

STEP 5

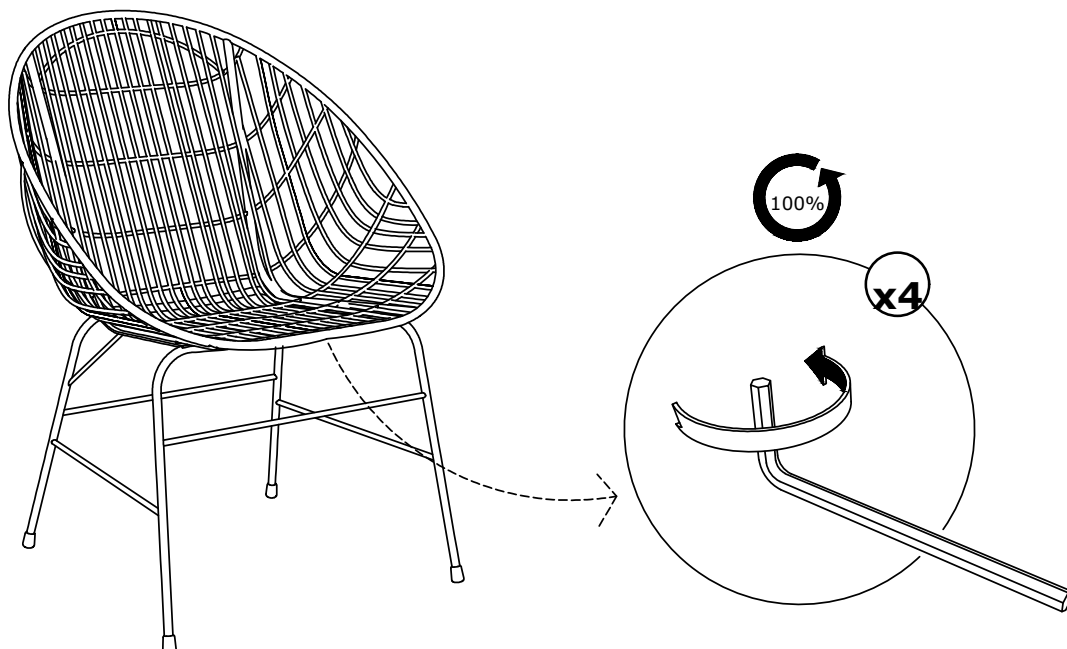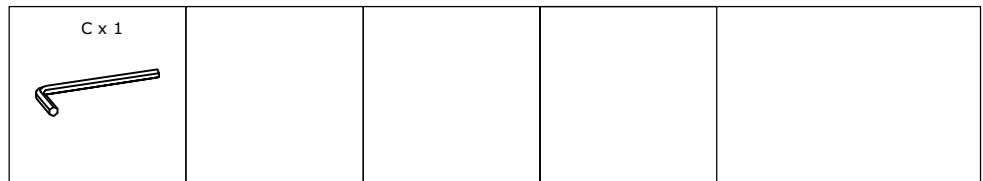

STEP 6

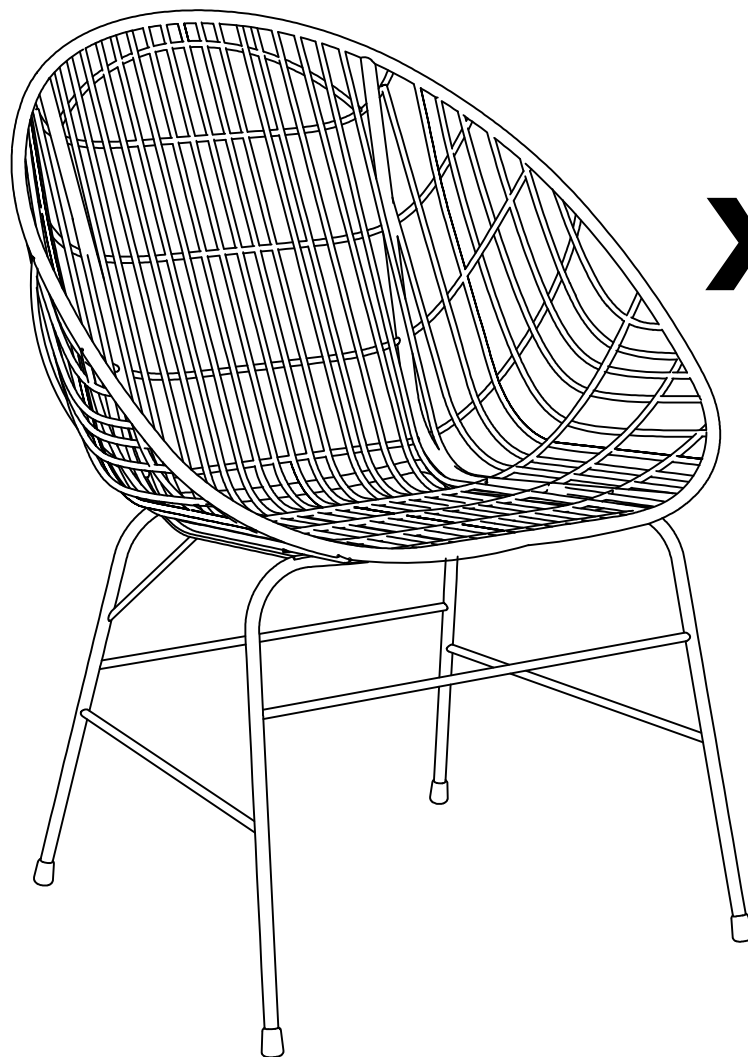
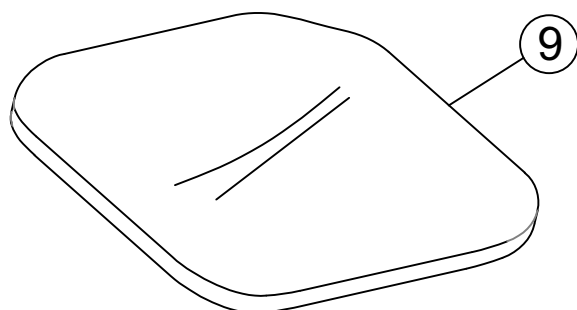
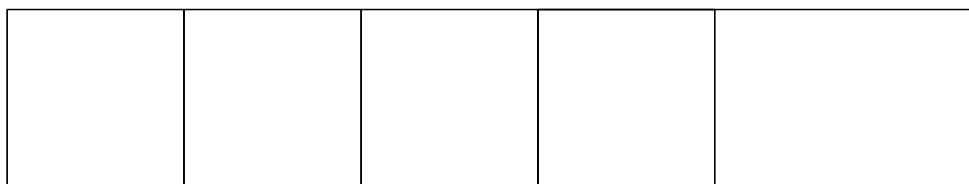


x2




IMPORTANT NOTE:

Do not tighten all screws/bolts until all completely assembled.
Thank you.


STEP 7

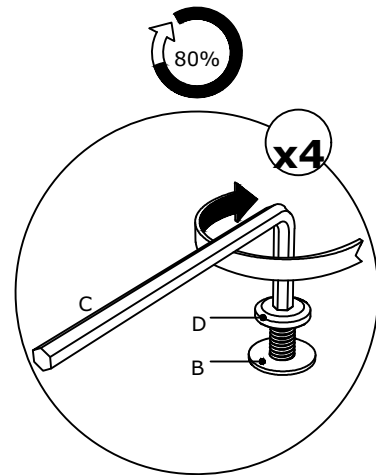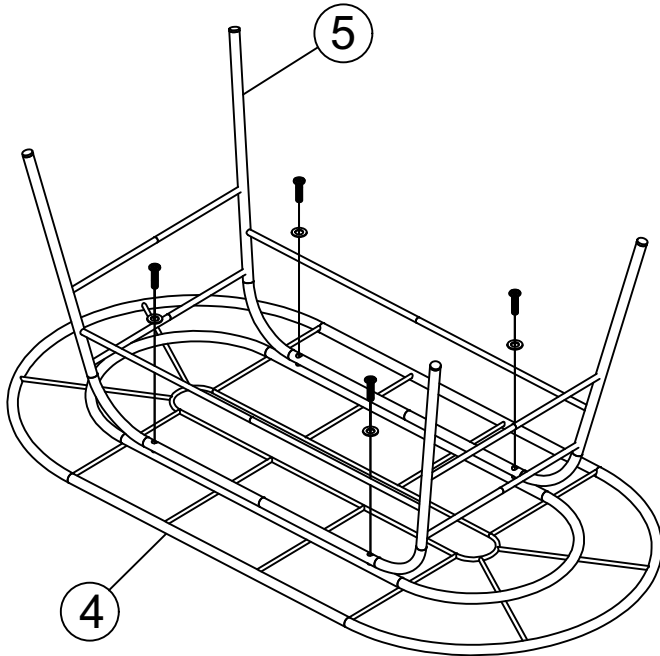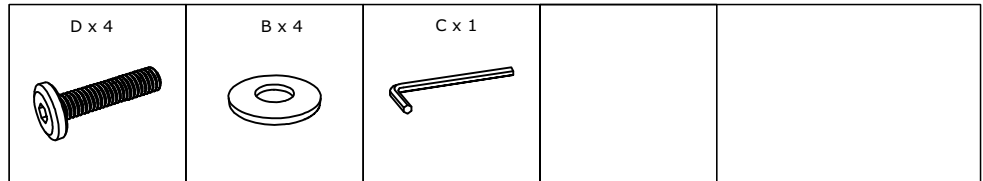

STEP 8

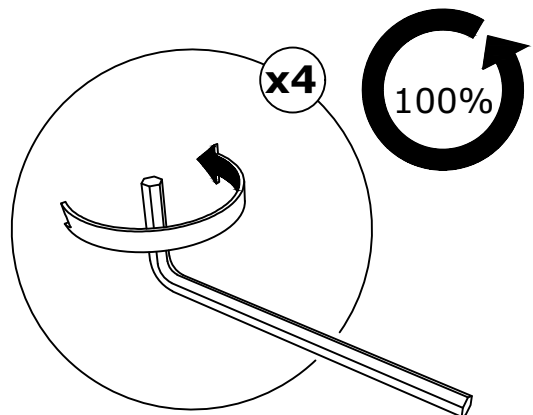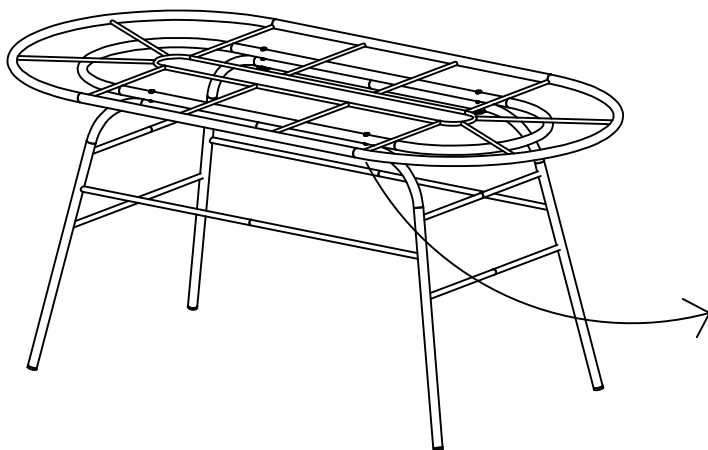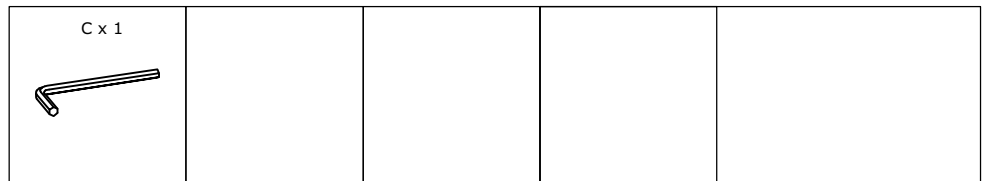

STEP 9

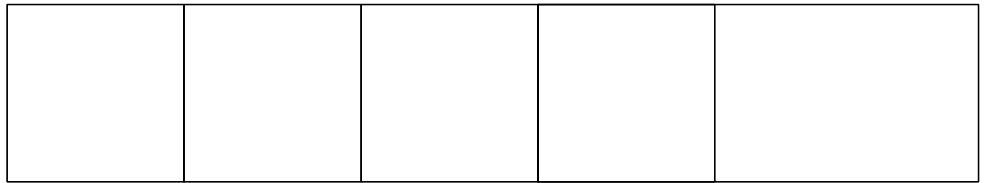

IMPORTANT NOTE:

Do not tighten all screws/bolts until all completely assembled.
Thank you.

